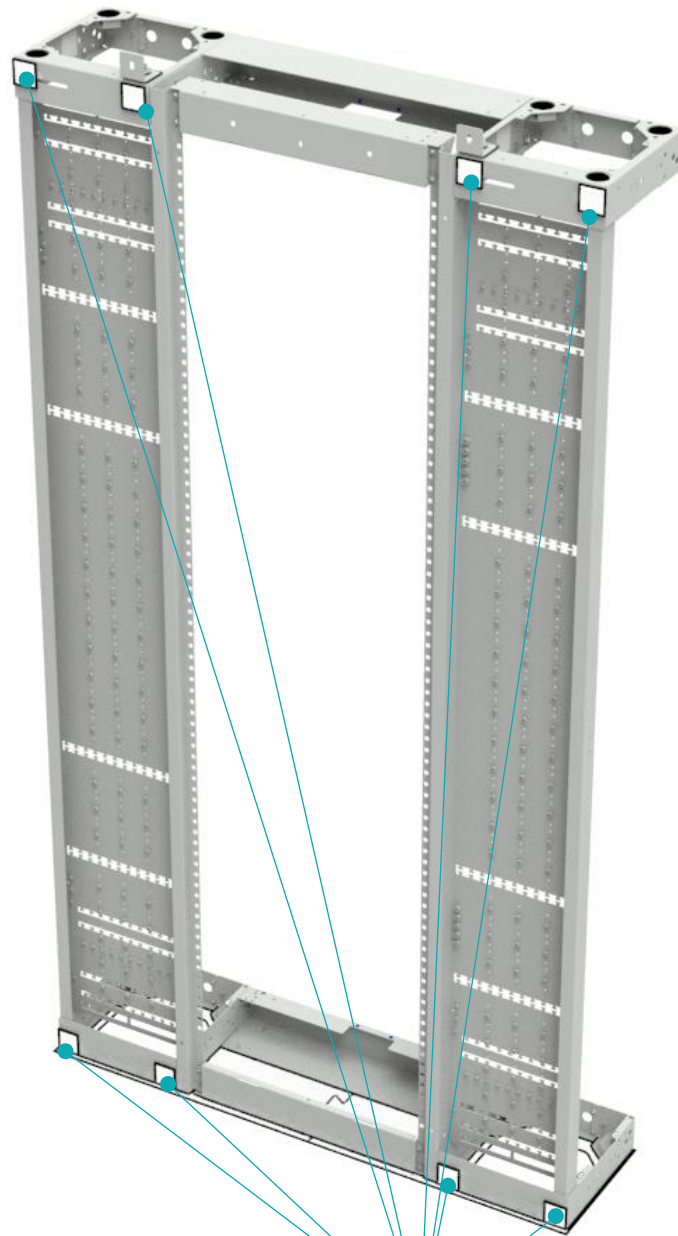


Installation Instruction FIST-GR3-ISOLATOR-900/1050/1200 isolation Kit

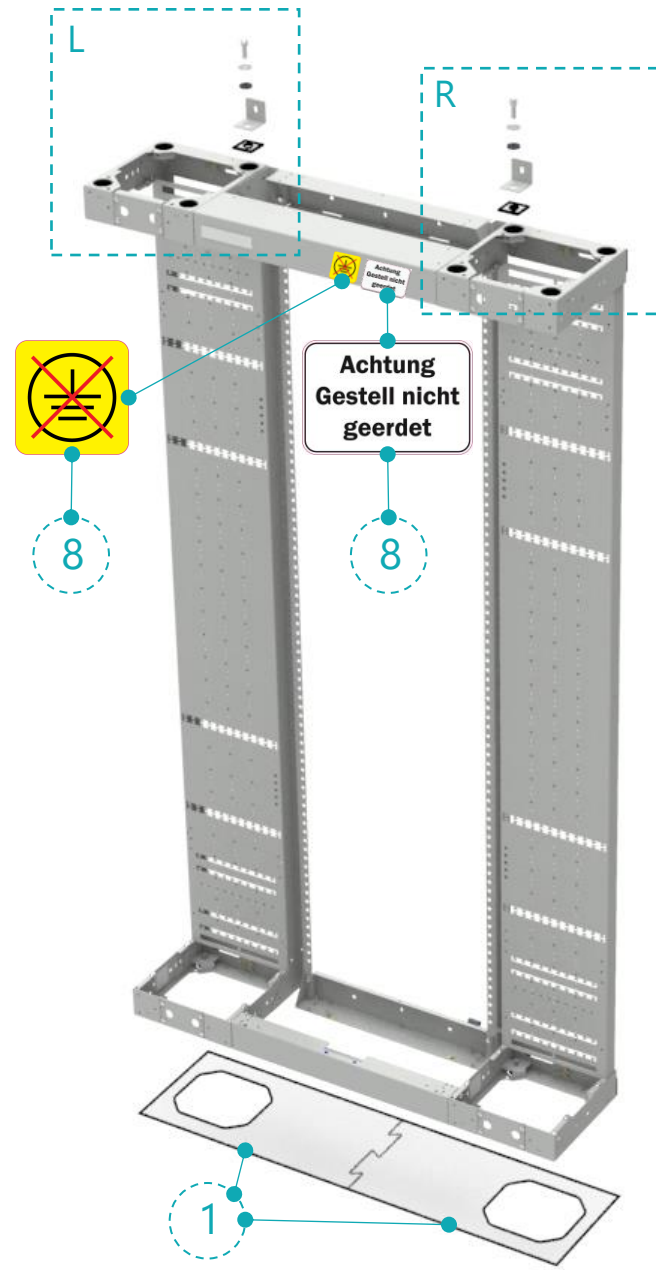
BACK VIEW



Wall insulation

- 1) Position small Isolation plates (without hole) at back side of the Rack.
- 2) Do not install the green/yellow grounding wires.



FRONT VIEW



Floor insulation

- 3) Position the 2 Isolation plates ① according the side ducts. (example picture is 1200) and put the Rack on top.

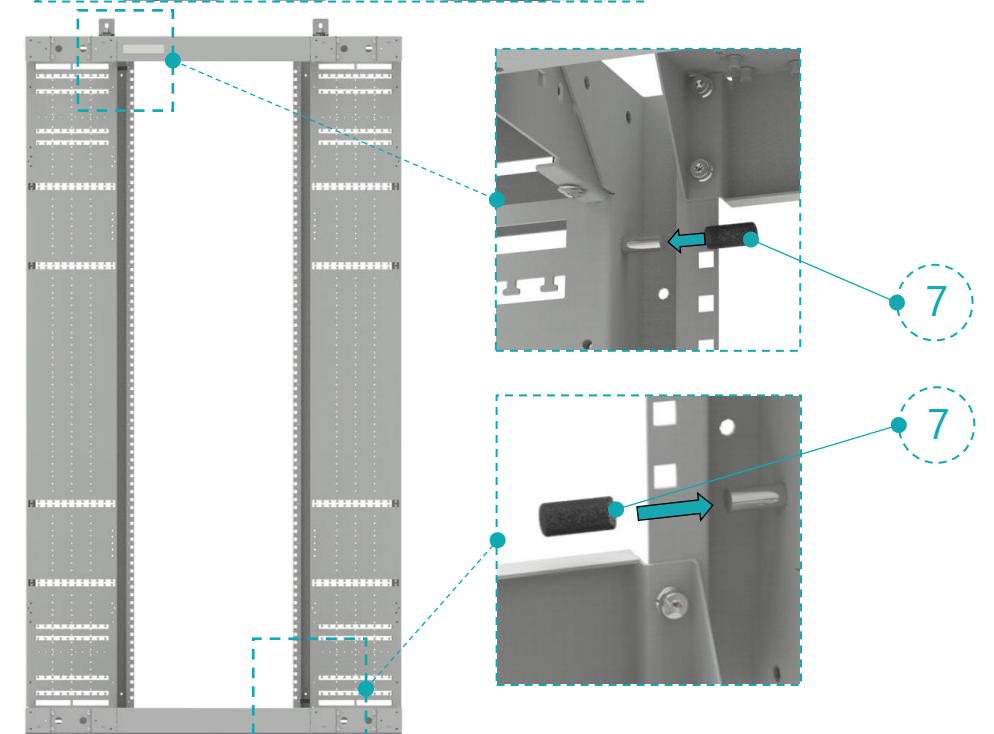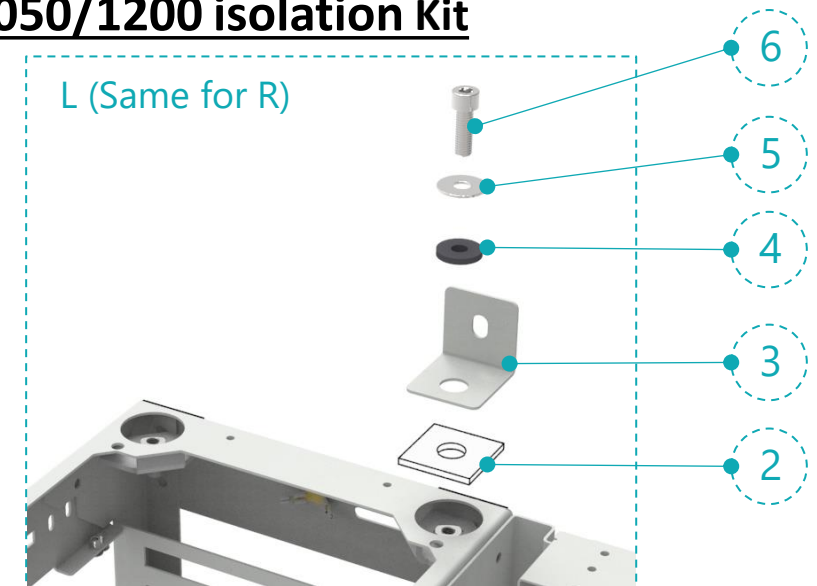
L (Same for R)






- 4) Place small Isolation plate (with hole) ②, L-bracket ③, shoulder washer ④, washer ⑤ and mount all together with bolt M10 ⑥
- 5) Repeat this also for the Right-side and attach the frame to the wall.
- 6) Mount the 2 End Caps ⑦ over grounding bolts top left and bottom right.
- 7) Stick Earth-Free Labels ⑧ in the middle of the Rack.




Note: conduct a contact resistance test after installation !

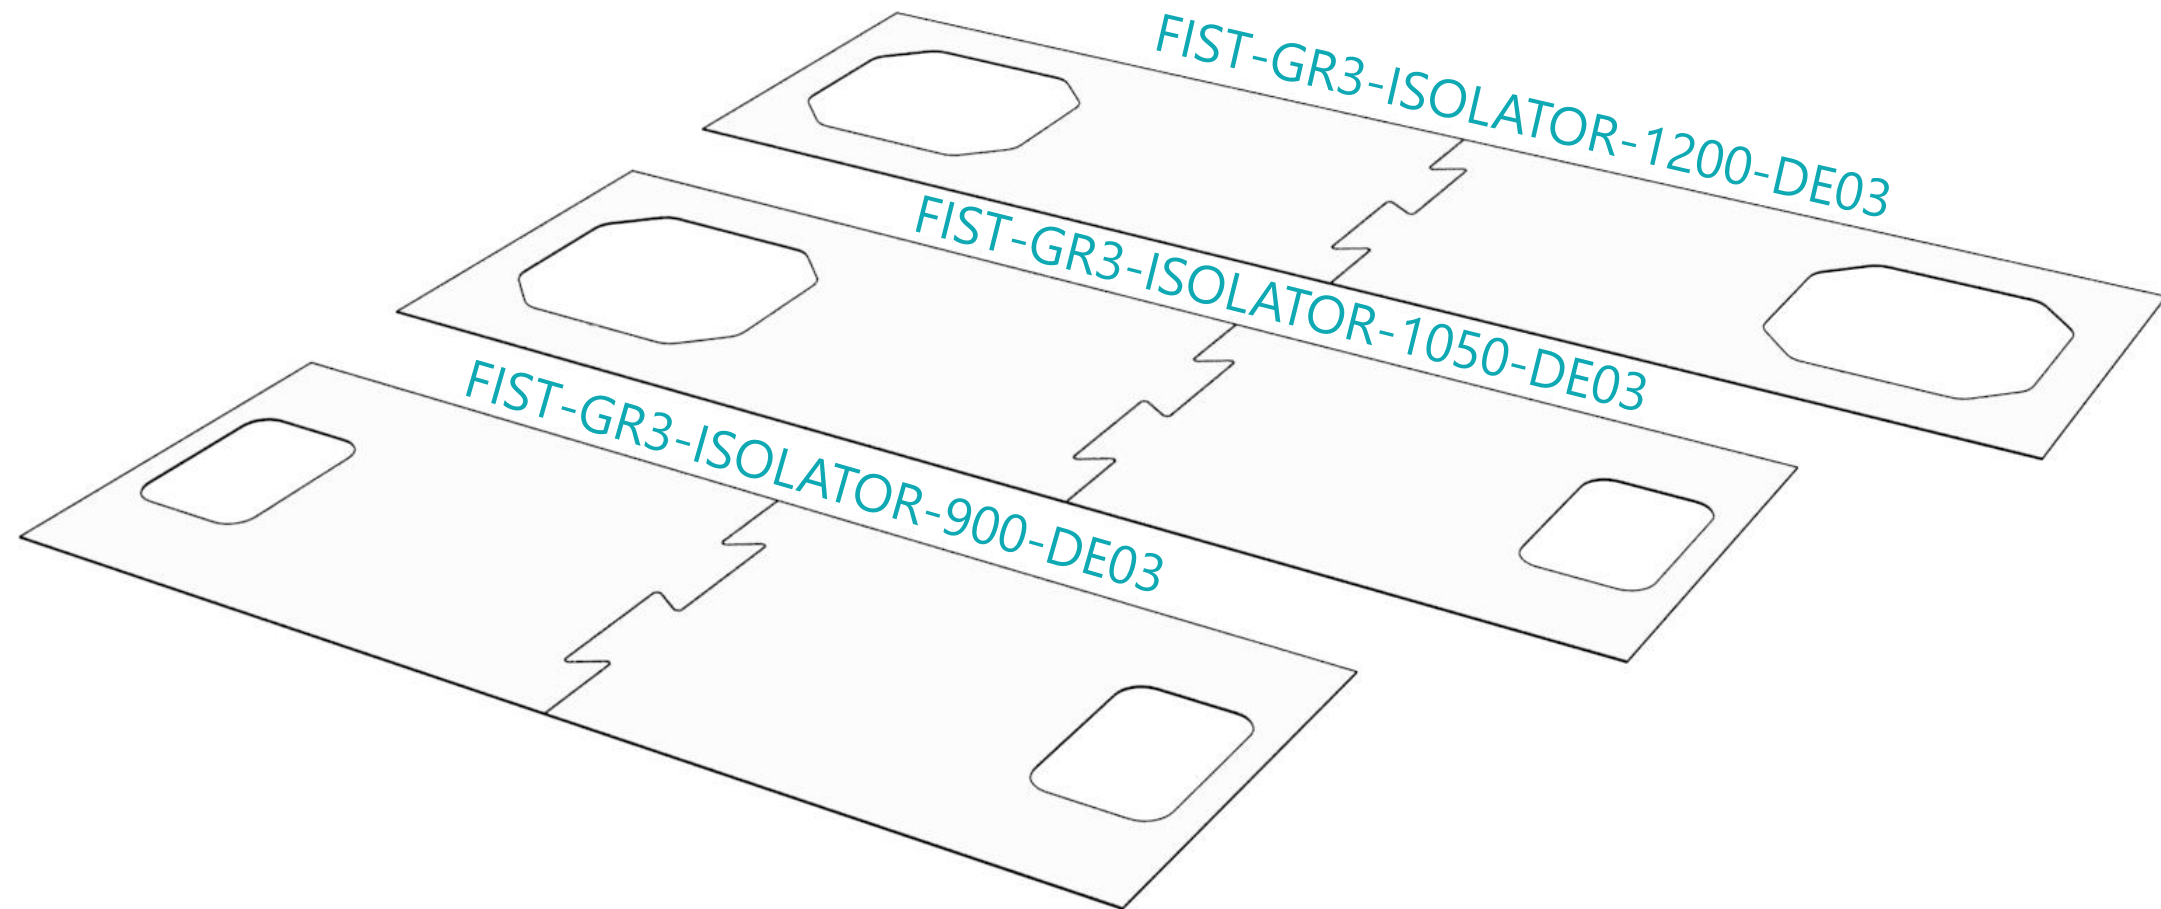Versions of Isolation plates:



Content:

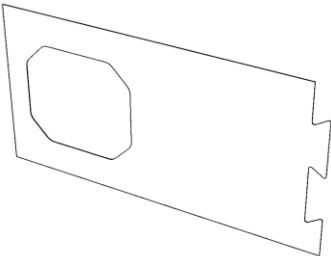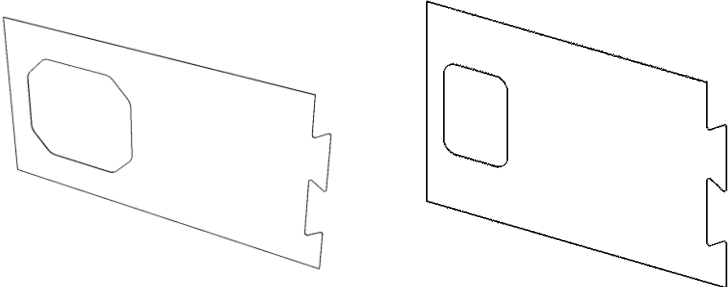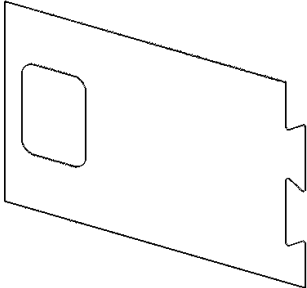2x	
2x	FIST-GR3-ISOLATOR-1200-DE03 
1x	FIST-GR3-ISOLATOR-1050-DE03 
2x	FIST-GR3-ISOLATOR-900-DE03 

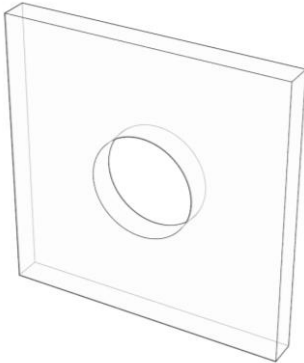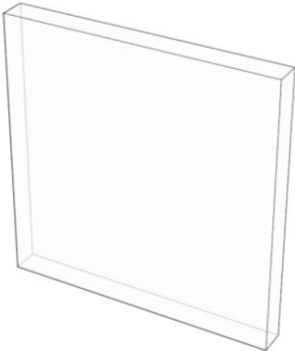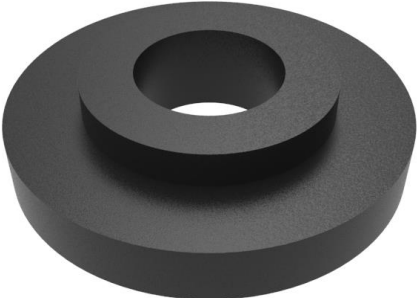2x	 
2x	
2x	
1x	 Achtung Gestell nicht geerdet