


TC-575-AD1  
Rev A, Feb 2017  
[www.commscope.com](http://www.commscope.com)

## Multi port kit


### 1 Kit content




### 2 Installation

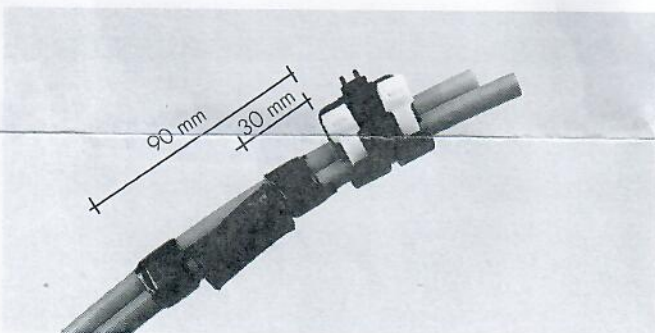


2.1 The first foam 30 mm from the cable retention device, second 90 mm.

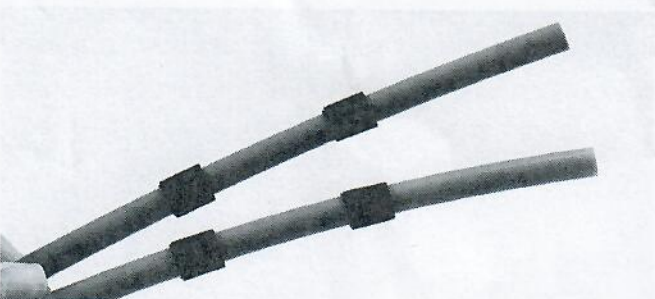


2.2 Place the foam around the two tubes.

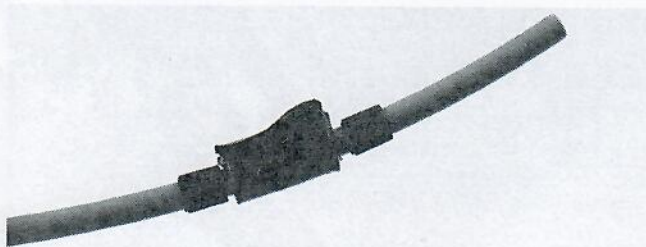

2.3 Place the gel between the foam on one of the two tubes.

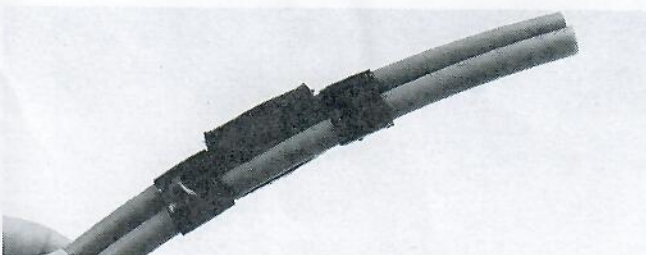

2.4 Using tape to hold the two tubes together.

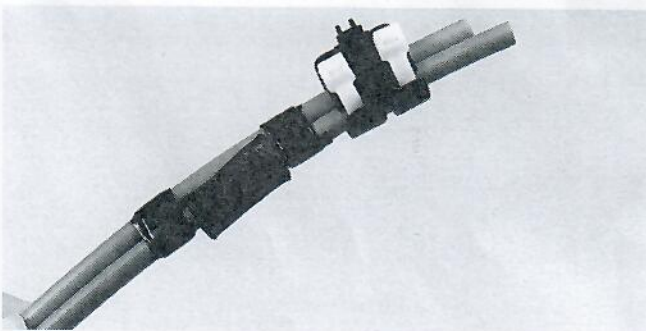

2.4 Install the two tubes in the cable retention device.